

ASSEMBLY INSTUCTIONS

WES0930 WES0936 WES0942 WES1230 WES1236 WES1242

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Attach top&bottom panel with side panel,use screws.


STEP 2 Attach back panel with side panel,using screws

1、 30"to 36"high cabinets have FOUR top and bottom.(B)


2、 42"high cabinets have FIVE top and bottom.(B)


| PARTS LIST | | |
|------------|----------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 1 |
| B | TOP AND BOTTOM | |
| C | BACK PANEL | 1 |

STEP:1

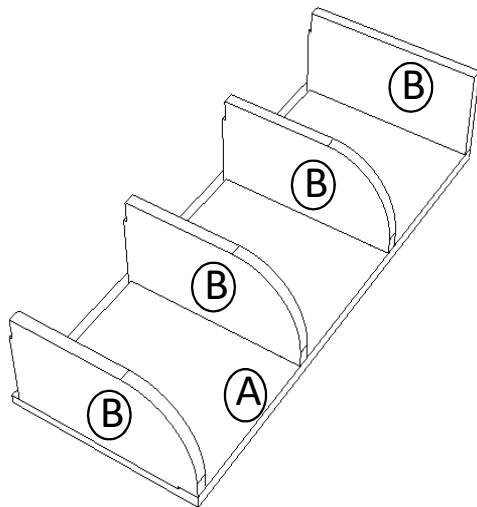

STEP:2

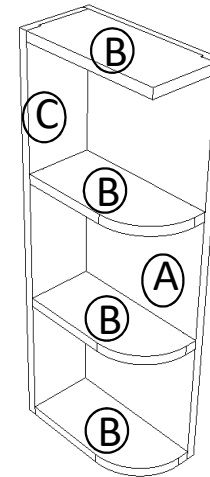

| 1 | 1"FLAT HEAD SCREW FOR CARCASS |  1" flat head screw |
|---------------|-------------------------------|---|
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

W0930 W1230 W1530 W1830 W2130 W0936 W1236 W1536 W1836 W2136
W0942 W1242 W1542 W1842 W2142

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2: Use splints and two in one fasteners to connect the top and bottom panels to the side panel.

STEP 3: Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 4: Use splints and two in one fasteners to connect the face frame to the side, top and bottom.

STEP 5: Install shelf clips in holes to desired location then adjustable shelf

1、 12"to 18"high cabinets have ZERO adjustable shelves(E)


2、 21"to 27"high cabinets have ONE adjustable shelves(E)

3、 30"to 36"high cabinets have TWO adjustable shelves(E)


4、 39"to 42"high cabinets have THREE adjustable shelves(E)

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | TOP&BOTTOM PANEL | 2 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | |


STEP1

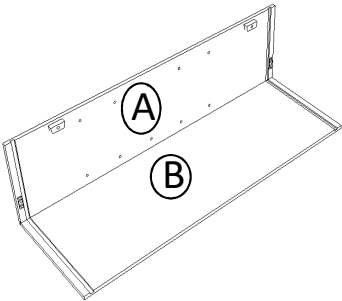


STEP2

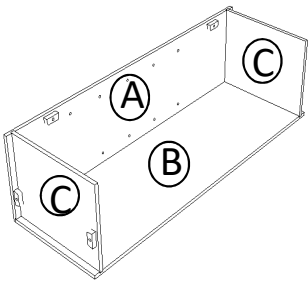


STEP3

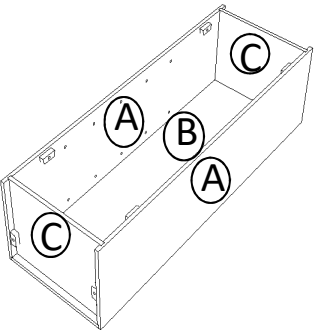




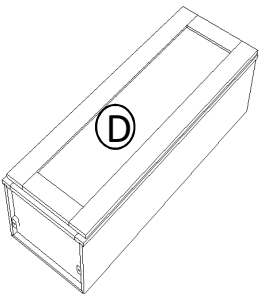

STEP4

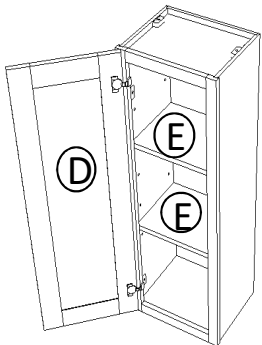

STEP5



| 5 | 1 3/8" SOFTCLOSE HINGE |  |
|---------------|------------------------|---|
| 4 | 1" SCREW |  |
| 3 | SHELF CLIP |  |
| 2 | BUMPER |  Bumper |
| 1 | TWO IN ONE FASTENER |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

W2430 W2730 W3030 W3330 W3630 W2436 W2736 W3036 W3336 W3636
 W2442 W2742 W3042 W3342 W3642 W3012 W3612 W3015 W3615 W3018 W3618
 W3024 W3624 W361224 W361824 W362424

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2: Use splints and two in one fasteners to connect the top and bottom panels to the side panel.

STEP 3: Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4: Use splints and two in one fasteners to connect the face frame to the side, top and bottom.

STEP 5: Install shelf clips in holes to desired location then adjustable shelf


- 1、12"to 18"high cabinets have ZERO adjustable shelves(E)
- 2、21"to 27"high cabinets have ONE adjustable shelves(E)
- 3、30"to 36"high cabinets have TWO adjustable shelves(E)
- 4、39"to 42"high cabinets have THREE adjustable shelves(E)

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | TOP&BOTTOM PANEL | 2 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | |


STEP1

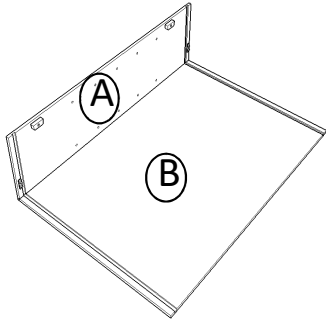


STEP2

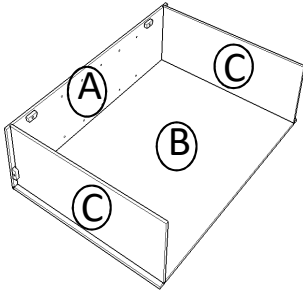


STEP3


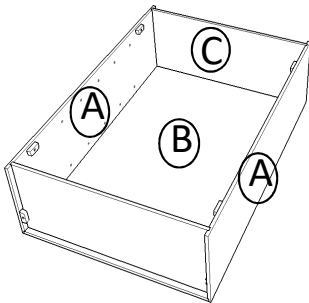


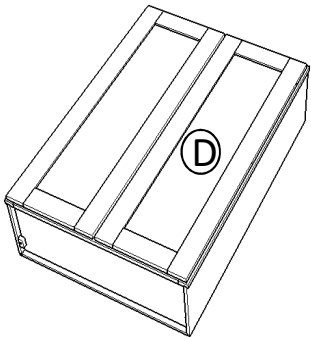


STEP4

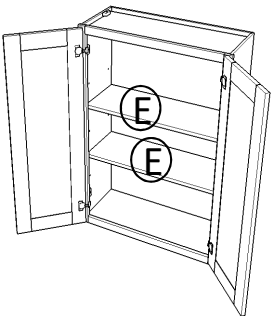

STEP5



| 5 | 1 3/8" SOFTCLOSE HINGE |  |
|---------------|------------------------|---|
| 4 | 1" SCREW |  |
| 3 | SHELF CLIP |  |
| 2 | BUMPER |  |
| 1 | TWO IN ONE FASTENER |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

WBC2730 WBC2736 WBC2742 WBC3030 WBC3036 WBC3042

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2: Use splints and two in one fasteners to connect the top and bottom panels to the side panel.

STEP 3: Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 4: Use splints and two in one fasteners to connect the face frame to the side, top and bottom.


STEP 5: Install shelf clips in holes to desired location then adjustable shelf

1、 30"to 36"high cabinets have TWO adjustable shelves(E)


2、 39"to 42"high cabinets have THREE adjustable shelves(E)

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | TOP&BOTTOM PANEL | 2 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | |


STEP1

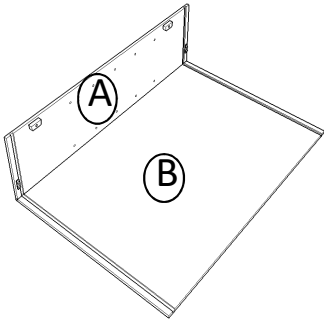


STEP2

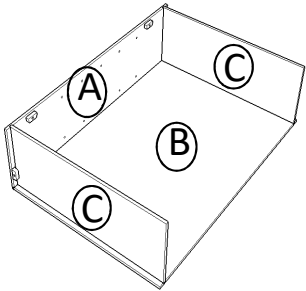


STEP3


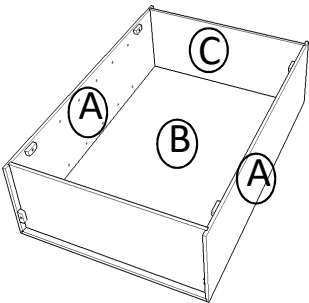


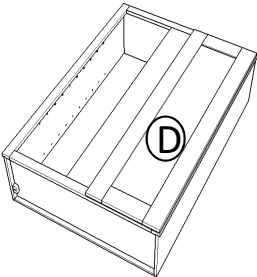


STEP4

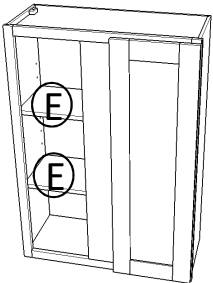

STEP5



| | | |
|---------------|------------------------|---|
| 5 | 1 3/8" SOFTCLOSE HINGE |  |
| 4 | 1" SCREW |  |
| 3 | SHELF CLIP |  |
| 2 | BUMPER |  Bumper |
| 1 | TWO IN ONE FASTENER |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

WDC2430 WDC2436 WDC2442

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Use splints and two in one fasteners to connect the back side panel and the top bottom panel.

STEP 2: Use splints and two in one fasteners to connect the back side panel and front side panel.And put in the back panel.

STEP 3: Use splints and two in one fasteners to connect the face frame to the side, top and bottom.


STEP 4: Install shelf clips in holes to desired location then adjustable shelf

1、 30"to 36"high cabinets have TWO adjustable shelves(E)


2、 39"to 42"high cabinets have THREE adjustable shelves(E)

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | FRONT SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | TOP&BOTTOM PANEL | 2 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | |
| F | BACK SIDE PANEL | 2 |


STEP1

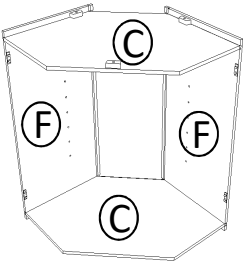


STEP2



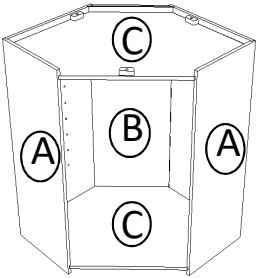


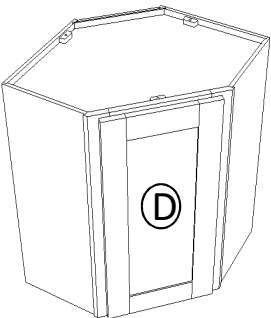

STEP3

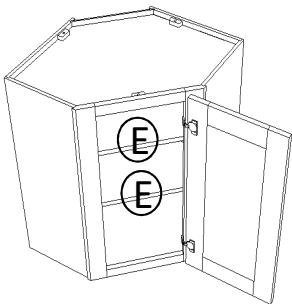

STEP4



| 5 | 1 5/8" SOFTCLOSE HINGE |  |
|---------------|------------------------|---|
| 4 | 1" SCREW |  |
| 3 | SHELF CLIP |  |
| 2 | BUMPER |  |
| 1 | TWO IN ONE FASTENER |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

WWR3018 WWR3618 WWR3015 WWR3615

| PARTS LIST | | |
|------------|------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | TOP&BOTTOM PANEL | 2 |
| D | FACE FRAME | 1 |
| E | INNER FRAME | 1 |

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 2: Use splints and two in one fasteners to connect the top and bottom panels to the side panel.

STEP 3: Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4: Put in inner frame.

STEP 5: Use splints and two in one fasteners to connect the face frame to the side, top and bottom.


STEP1

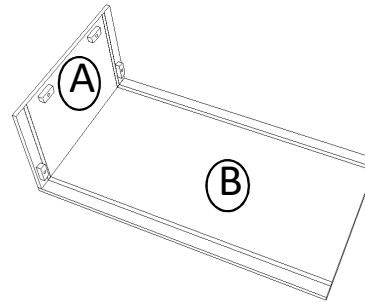


STEP2

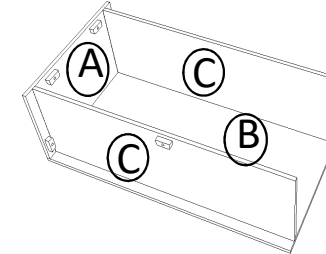


STEP3

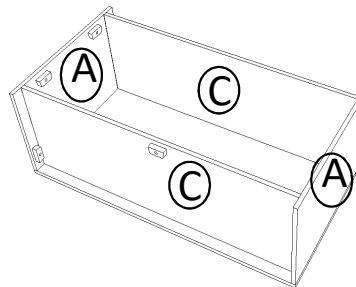


STEP4

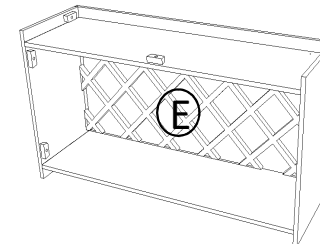

STEP5

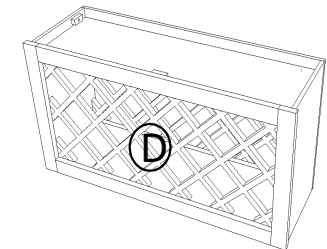

| 2 | 1" SCREW |  |
|---------------|---------------------|---|
| 1 | TWO IN ONE FASTENER |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

BF09

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.


STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.


STEP 5 Install shelf clips in holes to desired location then adjustable shelf.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | 1 |
| F | SKIRTING BOARD | 1 |


STEP1

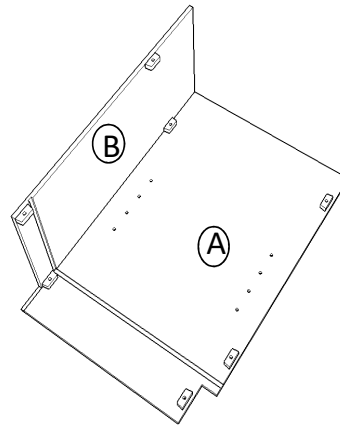


STEP2

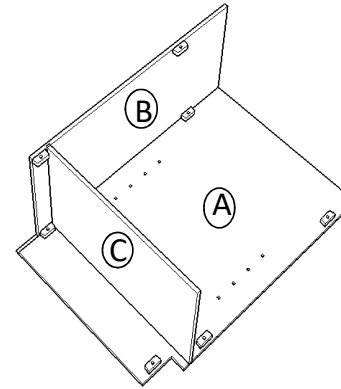


STEP3

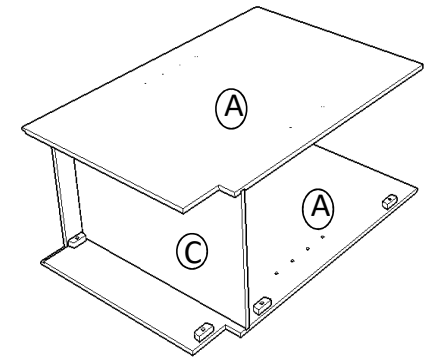

STEP4

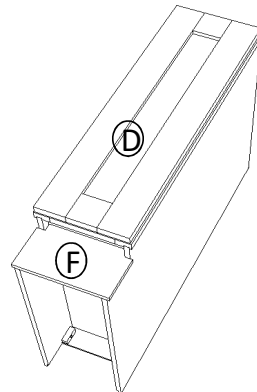

STEP5

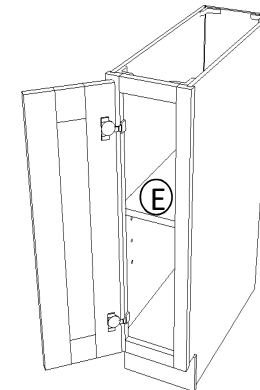

| 6 | TWO IN ONE FASTENER | |
|-----|------------------------|---------|
| 5 | 1 3/8" SOFTCLOSE HINGE | |
| 4 | BUMPER | |
| 3 | SHELF CLIP | |
| 2 | Iron foot code | |
| 1 | 1/2" SCREW | |
| NO. | Description | PICTURE |

HARDWARE LIST

ASSEMBLY INSTUCTIONS

B12 B15 B18 B21

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

STEP 5 Install the drawer box and lock the slide rail.


STEP 6 Install shelf clips in holes to desired location then adjustable shelf.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | 1 |
| F | SKIRTING BOARD | 1 |
| G | RAWER BOARD EDG | 2 |
| H | DRAWER BOARD | 2 |
| I | DRAWER PASE PLAT | 1 |


STEP1

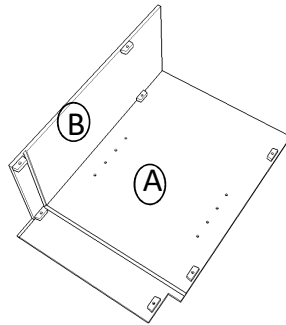


STEP2

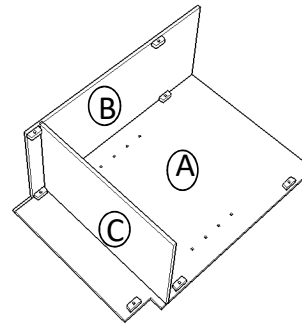



STEP3

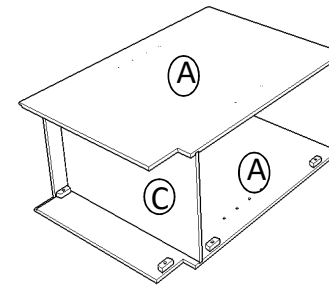


STEP4

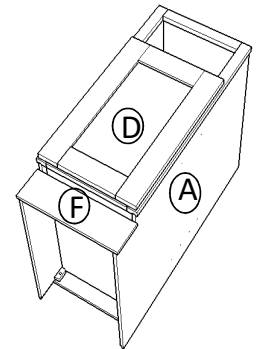

STEP5

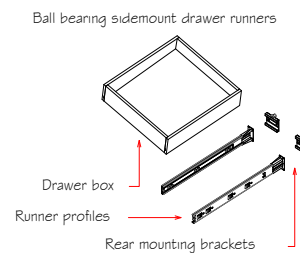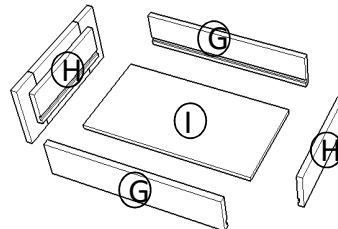

STEP6

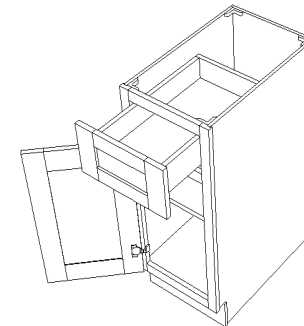

| 7 | TWO IN ONE FASTENER | |
|-----|------------------------|---------|
| 6 | 1 3/8" SOFTCLOSE HINGE | |
| 5 | BUMPER | |
| 4 | SLIDE RAIL | |
| 3 | SHELF CLIP | |
| 2 | Iron foot code | |
| 1 | 1/2" SCREW | |
| NO. | Description | PICTURE |

HARDWARE LIST

ASSEMBLY INSTUCTIONS

B24 B27 B30

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

STEP 5 Install the drawer box and lock the slide rail.


STEP 6 Install shelf clips in holes to desired location then adjustable shelf.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | 1 |
| F | SKIRTING BOARD | 1 |
| G | RAWER BOARD EDG | 2 |
| H | DRAWER BOARD | 2 |
| I | DRAWER PASE PLAT | 1 |


STEP1

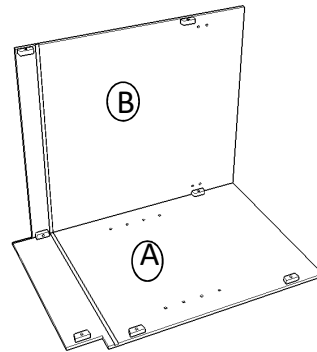


STEP2

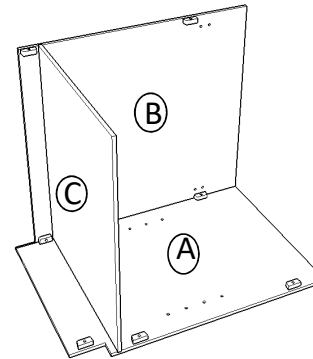



STEP3

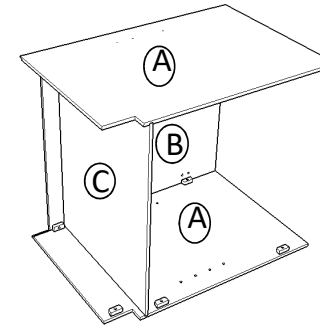


STEP4

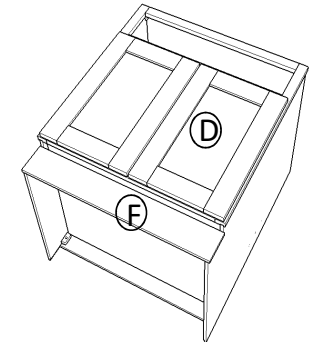

STEP5

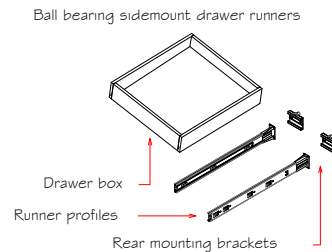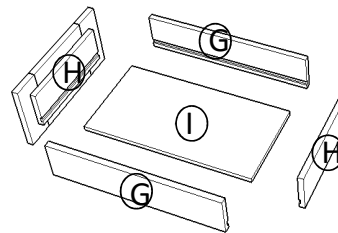

STEP6

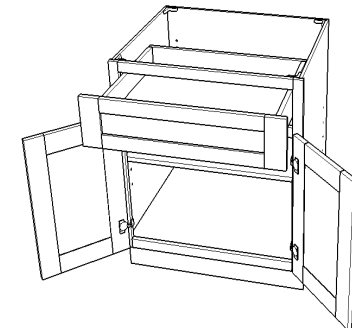

| 7 | TWO IN ONE FASTENER | |
|-----|------------------------|---------|
| 6 | 1 3/8" SOFTCLOSE HINGE | |
| 5 | BUMPER | |
| 4 | SLIDE RAIL | |
| 3 | SHELF CLIP | |
| 2 | Iron foot code | |
| 1 | 1/2" SCREW | |
| NO. | Description | PICTURE |

HARDWARE LIST

ASSEMBLY INSTUCTIONS

B33 B36 B39 B42

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

STEP 5 Install the drawer box and lock the slide rail.


STEP 6 Install shelf clips in holes to desired location then adjustable shelf.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | 1 |
| F | SKIRTING BOARD | 1 |
| G | RAWER BOARD EDG | 4 |
| H | DRAWER BOARD | 4 |
| I | DRAWER PASE PLAT | 2 |


STEP1

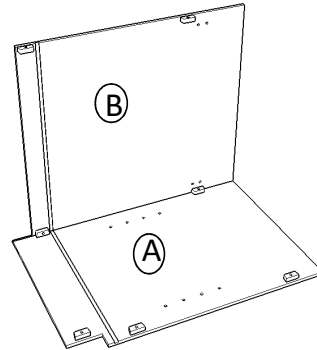


STEP2

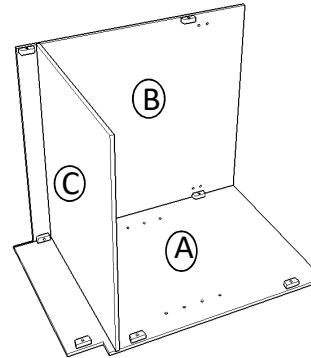


STEP3

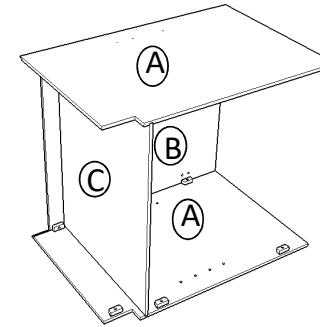


STEP4

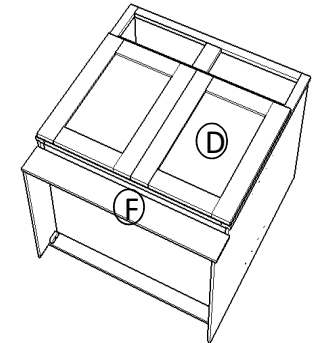

STEP5

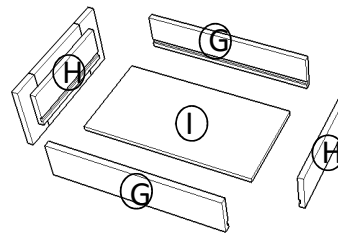


STEP6

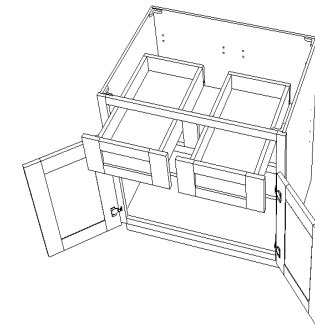

| 7 | TWO IN ONE FASTENER | |
|-----|------------------------|---------|
| 6 | 1 3/8" SOFTCLOSE HINGE | |
| 5 | BUMPER | |
| 4 | SLIDE RAIL | |
| 3 | SHELF CLIP | |
| 2 | Iron foot code | |
| 1 | 1/2" SCREW | |
| NO. | Description | PICTURE |

HARDWARE LIST

Ball bearing sidemount drawer runners

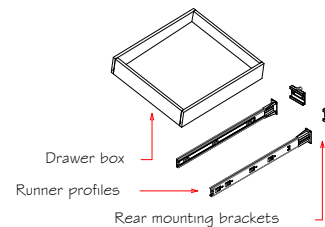

ASSEMBLY INSTUCTIONS

SB24 SB27 SB30 VSB24 VSB27 VSB30 VSB36 VSB42

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | SKIRTING BOARD | 1 |


STEP1

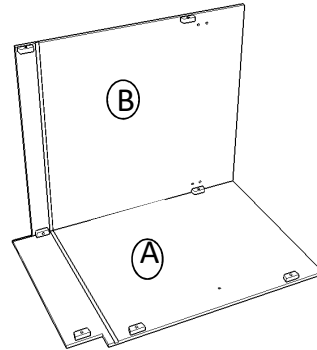



STEP2


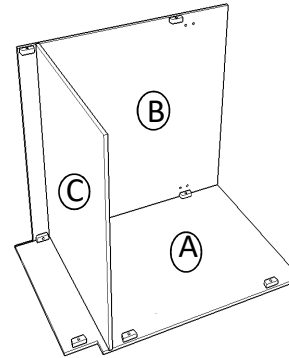


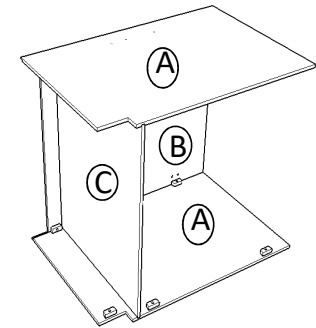


STEP3

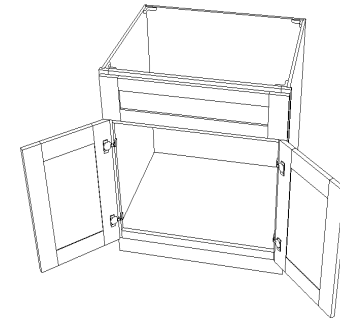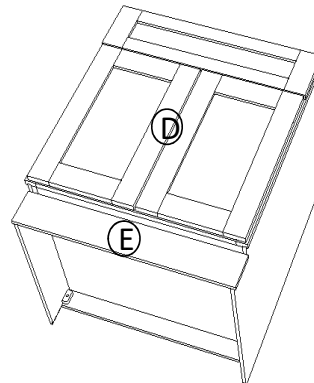

STEP4



| 7 | TWO IN ONE FASTENER |  |
|---------------|------------------------|---|
| 6 | 1 3/8" SOFTCLOSE HINGE |  |
| 5 | BUMPER |  |
| 2 | Iron foot code |  |
| 1 | 1/2" SCREW |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

SB33 SB36 SB39 SB42

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | SKIRTING BOARD | 1 |


STEP1

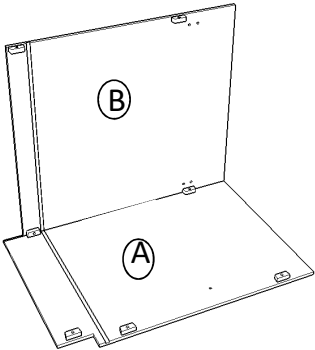



STEP2


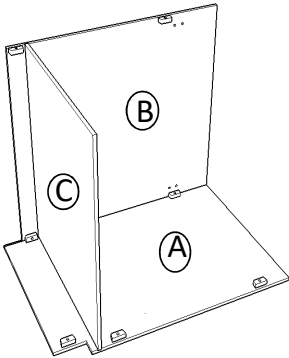


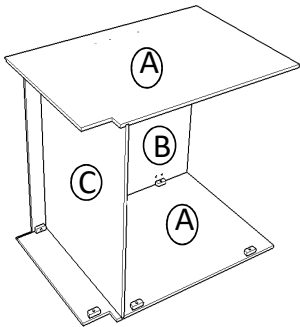


STEP3

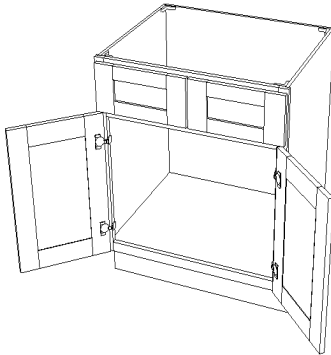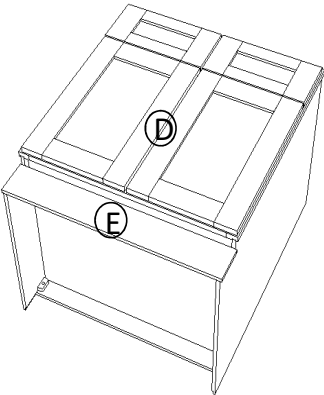

STEP4



| | | |
|---------------|------------------------|---|
| 7 | TWO IN ONE FASTENER |  |
| 6 | 1 3/8" SOFTCLOSE HINGE |  |
| 5 | BUMPER |  |
| 2 | Iron foot code |  |
| 1 | 1/2" SCREW |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

DB12 DB15 DB18 DB21 DB24 DB27 DB30 DB33 DB36
VDB12 VDB15 VDB18 VDB21 VDB24

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

STEP 5 Install the drawer box and lock the slide rail.


STEP 6 Slide the drawer into the cabinet.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | 0 |
| F | SKIRTING BOARD | 1 |
| G | RAWER BOARD EDG | 6 |
| H | DRAWER BOARD | 6 |
| I | DRAWER PASE PLAT | 3 |


STEP1

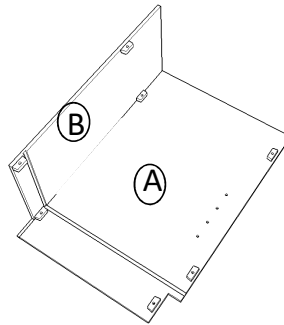


STEP2

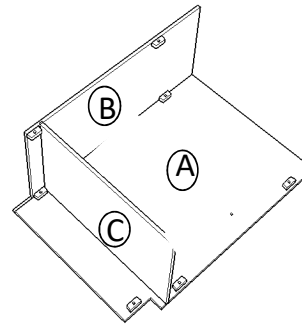



STEP3

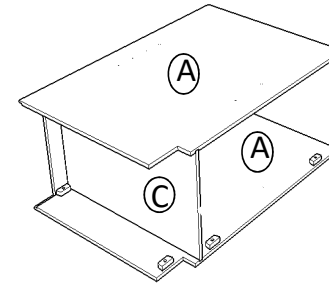


STEP4

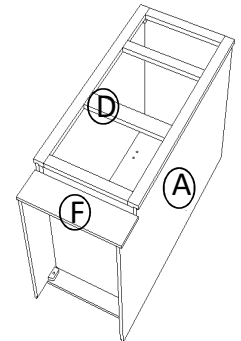

STEP5

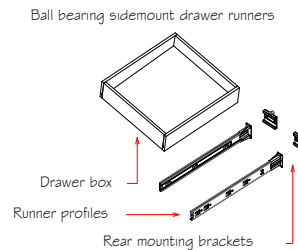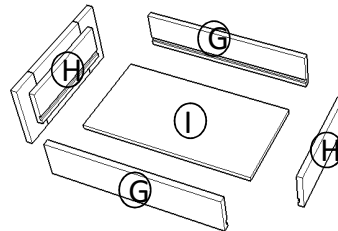

STEP6

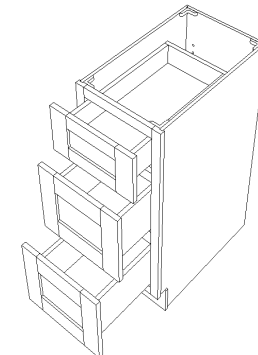

| 6 | TWO IN ONE FASTENER | |
|-----|---------------------|---------|
| 5 | BUMPER | |
| 4 | SLIDE RAIL | |
| 2 | Iron foot code | |
| 1 | 1/2" SCREW | |
| NO. | Description | PICTURE |

HARDWARE LIST

ASSEMBLY INSTUCTIONS

FSB33 FSB36

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | SKIRTING BOARD | 1 |


STEP1

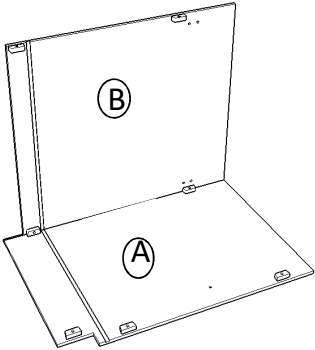



STEP2


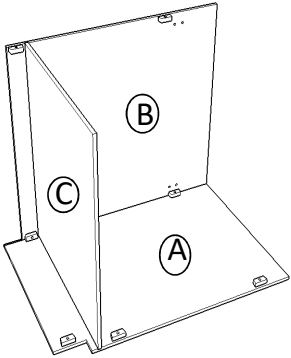


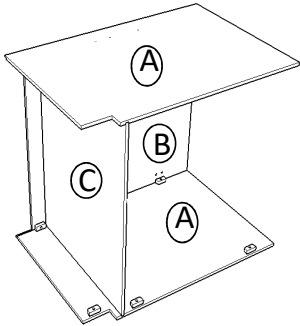


STEP3

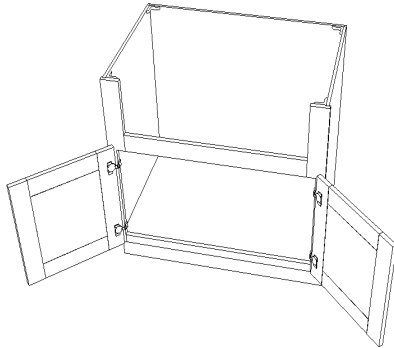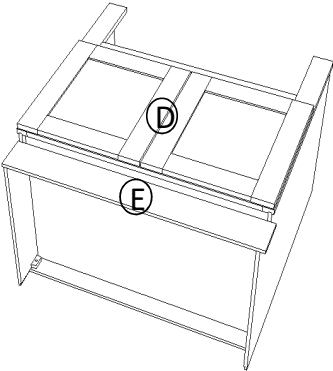

STEP4



| | | |
|---------------|------------------------|---|
| 7 | TWO IN ONE FASTENER |  |
| 6 | 1 3/8" SOFTCLOSE HINGE |  |
| 5 | BUMPER |  |
| 2 | Iron foot code |  |
| 1 | 1/2" SCREW |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

BBC36 BBC39 BBC42 BBC45 BBC48

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

STEP 5 Install the drawer box and lock the slide rail.


STEP 6 Install shelf clips in holes to desired location then adjustable shelf.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | 1 |
| F | SKIRTING BOARD | 1 |
| G | RAWER BOARD EDG | 2 |
| H | DRAWER BOARD | 2 |
| I | DRAWER PASE PLAT | 1 |


STEP1

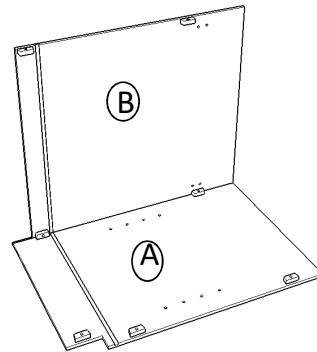


STEP2

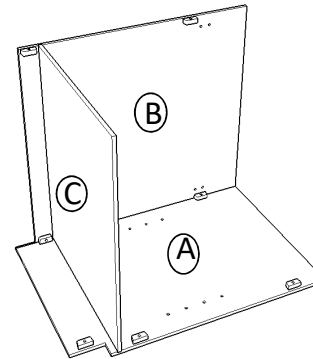


STEP3

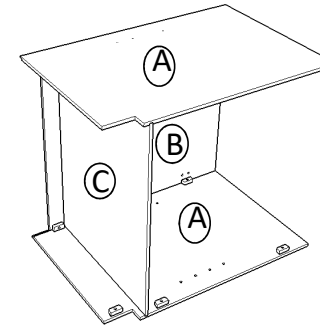



STEP4

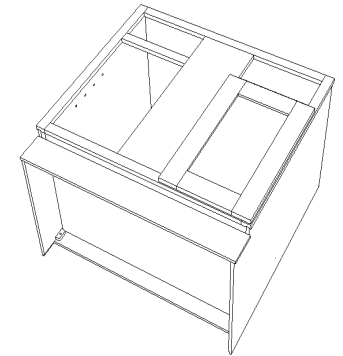

STEP5

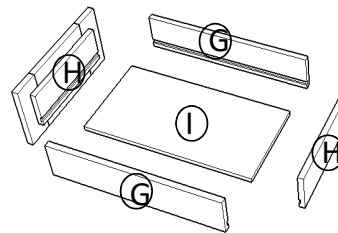

STEP6

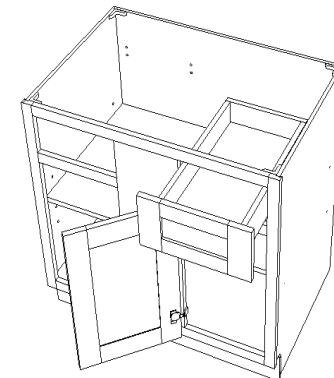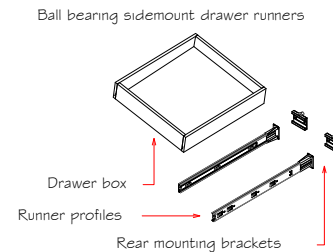

| 7 | TWO IN ONE FASTENER | |
|-----|------------------------|---------|
| 6 | 1 3/8" SOFTCLOSE HINGE | |
| 5 | BUMPER | |
| 4 | SLIDE RAIL | |
| 3 | SHELF CLIP | |
| 2 | Iron foot code | |
| 1 | 1/2" SCREW | |
| NO. | Description | PICTURE |

HARDWARE LIST

ASSEMBLY INSTUCTIONS

BDC36

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Use splints and two in one fasteners to connect the back side panel and the bottom panel.

STEP 2: Use splints and two in one fasteners to connect the back side panel and front side panel. And put in the back panel.

STEP 3: Use splints and two in one fasteners to connect the front side panel, back side panel and bottom panel.


STEP 4: Use splints and two in one fasteners to connect the bracket and skirting board, and put it into the back panel.

STEP 5: Use splints and two in one fasteners to connect the face frame to the front side panel and bottom panel.


STEP 6: Install shelf clips in holes to desired location then adjustable shelf.

| PARTS LIST | | |
|------------|---------------------------|-----|
| NO. | Description | QTY |
| A | FRONT SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame, Door Attached | 1 |
| E | ADJUSTABLE SHELF | 1 |
| F | BACK SIDE PANEL | 2 |
| G | SKIRTING BOARD | 1 |
| H | BRACKET | 1 |


STEP1

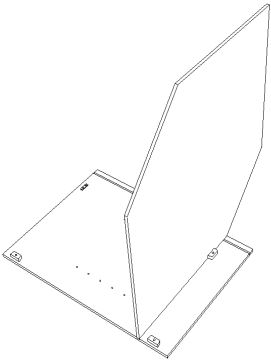


STEP2

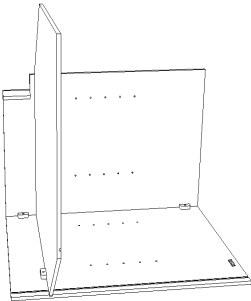


STEP3

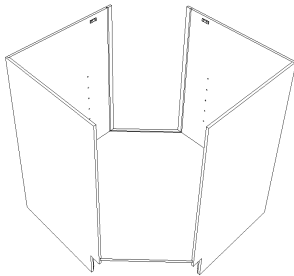


STEP4



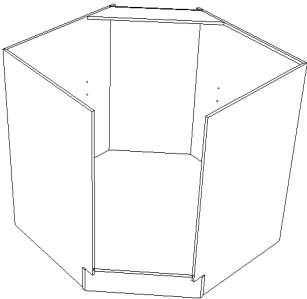




STEP5

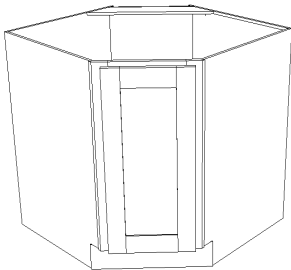

STEP6

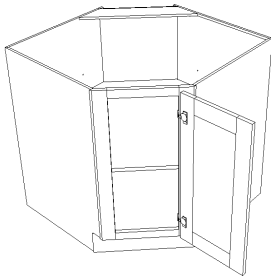

| 5 | 1 5/8" SOFTCLOSE HINGE |  |
|---------------|------------------------|---|
| 4 | 1" SCREW |  |
| 3 | SHELF CLIP |  |
| 2 | BUMPER |  |
| 1 | TWO IN ONE FASTENER |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

BSR09

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

STEP 5 Install the drawer box and lock the slide rail.


STEP 6 Slide the drawer into the cabinet.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | 0 |
| F | SKIRTING BOARD | 1 |
| G | RAWER BOARD EDG | 6 |
| H | DRAWER BOARD | 2 |
| I | DRAWER PASE PLAT | 3 |


STEP1

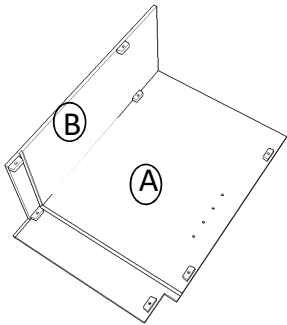


STEP2

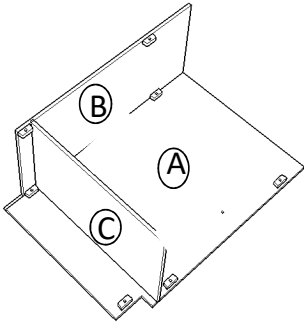


STEP3

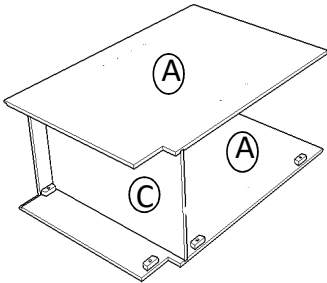


STEP4

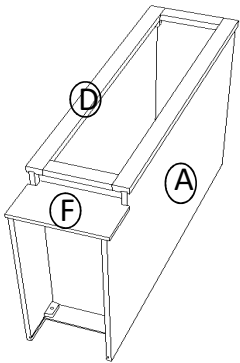



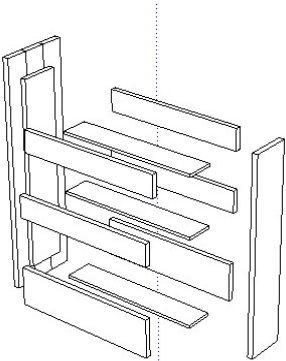


STEP5

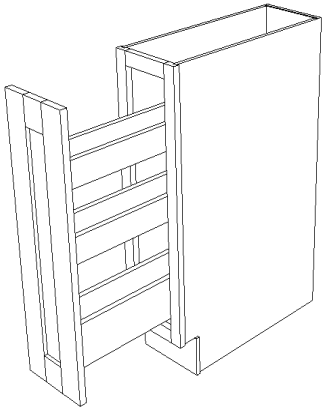


STEP6



| | | |
|---------------|---------------------|---|
| 6 | TWO IN ONE FASTENER |  |
| 5 | BUMPER |  |
| 4 | SLIDE RAIL |  |
| 2 | Iron foot code |  |
| 1 | 1/2" SCREW |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

Ball bearing sidemount drawer runners

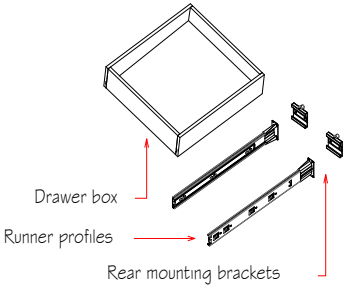

ASSEMBLY INSTUCTIONS

TB18

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.


STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

STEP 5 Install the drawer box and lock the slide rail.


STEP 6 Slide the drawer into the cabinet.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | 0 |
| F | SKIRTING BOARD | 1 |
| G | RAWER BOARD EDG | 6 |
| H | DRAWER BOARD | 4 |
| I | DRAWER PASE PLAT | 3 |


STEP1

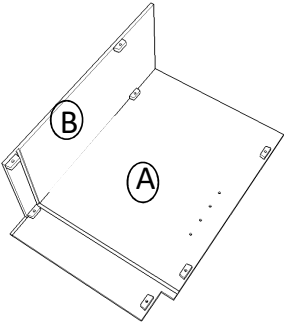


STEP2

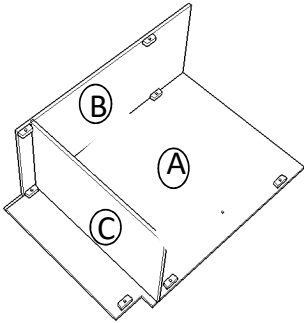


STEP3

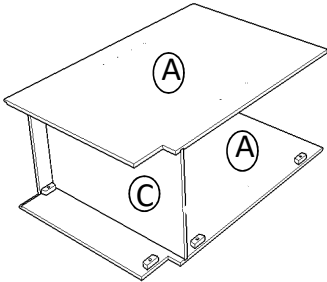


STEP4

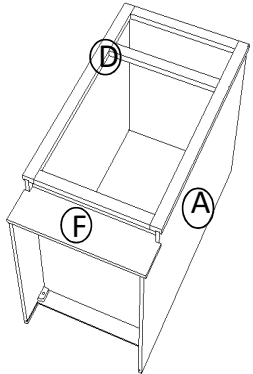




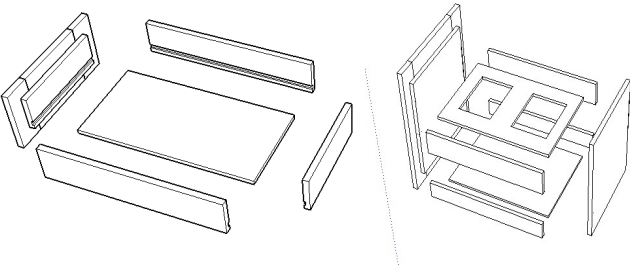

STEP5

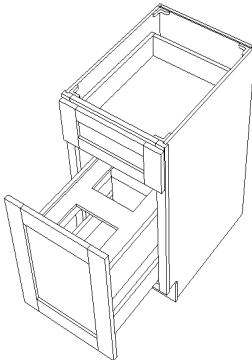


STEP6



| | | |
|---------------|---------------------|---|
| 6 | TWO IN ONE FASTENER |  |
| 5 | BUMPER |  |
| 4 | SLIDE RAIL |  |
| 2 | Iron foot code |  |
| 1 | 1/2" SCREW |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

Ball bearing sidemount drawer runners

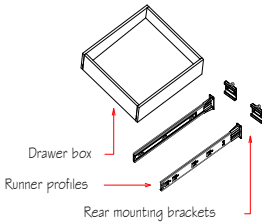

ASSEMBLY INSTUCTIONS

BES09

Getting started:

prepare a protection layer, a screwdriver


STEP 1 Attach top&bottom panel with side panel,use screws.

STEP 2 Attach back panel with side panel,using screws


STEP 3 Use splints and two in one fasteners to connect the skirting board to the side panel.

| PARTS LIST | | |
|------------|----------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 1 |
| B | TOP AND BOTTOM | 4 |
| C | BACK PANEL | 1 |
| D | SKIRTING BOARD | 2 |


STEP:1

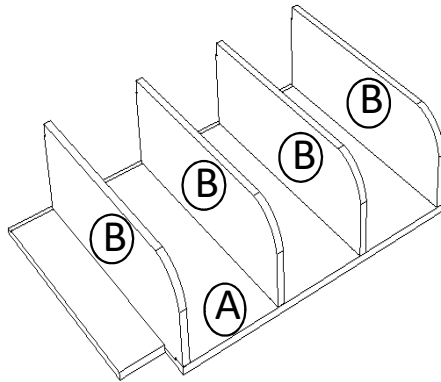



STEP:2

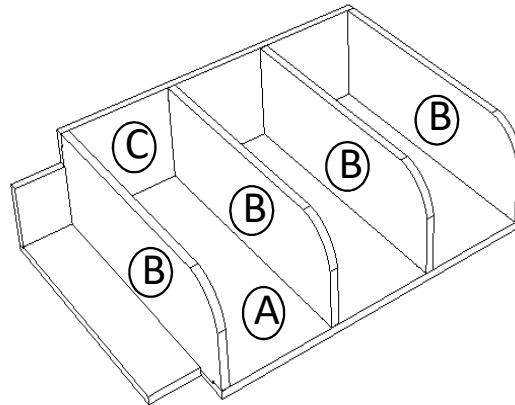

STEP:3

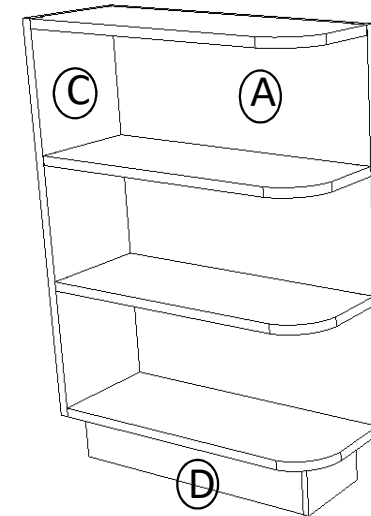

| 2 | TWO IN ONE FASTENER |  |
|---------------|-------------------------------|---|
| 1 | 1"FLAT HEAD SCREW FOR CARCASS |  1" flat head screw |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

PC1884 PC1890 PC1896

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.


STEP 5 Install shelf clips in holes to desired location then adjustable shelf.

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 3 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | |
| F | SKIRTING BOARD | 1 |


1、 84"to 90"high cabinets have four adjustable shelves(E)

2、 96"high cabinets have five adjustable shelves(E)


STEP1

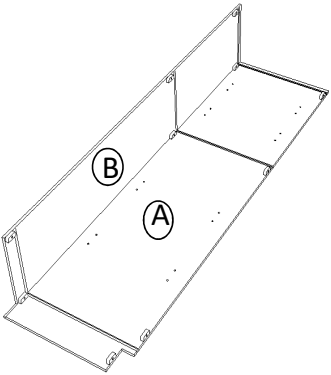


STEP2

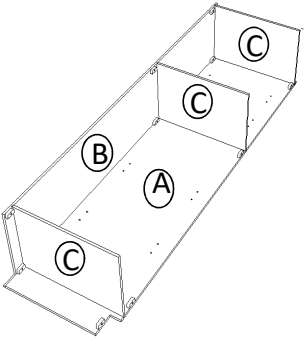


STEP3

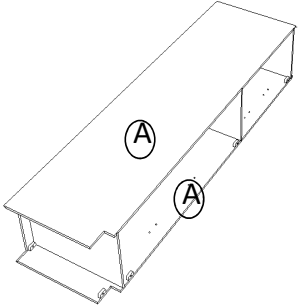

STEP4

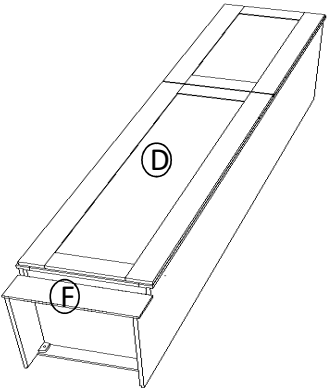

STEP5

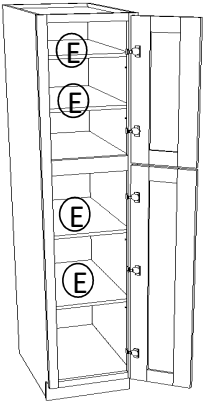

| | | |
|---------------|------------------------|---------|
| 5 | TWO IN ONE FASTENER | |
| 4 | 1 3/8" SOFTCLOSE HINGE | |
| 3 | BUMPER | |
| 2 | SHELF CLIP | |
| 1 | 1/2" SCREW | |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

PC2484 PC2490 PC2496 PC3084 PC3090 PC3096

PC3684 PC3690 PC3696

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.


STEP 5 Install shelf clips in holes to desired location then adjustable shelf.

1、84"to 90"high cabinets have four adjustable shelves(E)


2、96"high cabinets have five adjustable shelves(E)

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 3 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | |
| F | SKIRTING BOARD | 1 |


STEP1

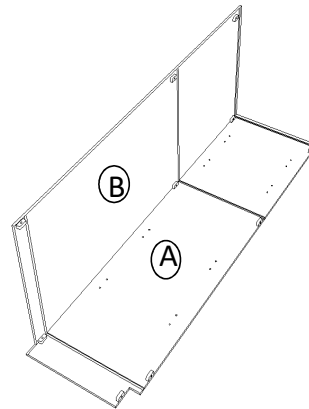


STEP2

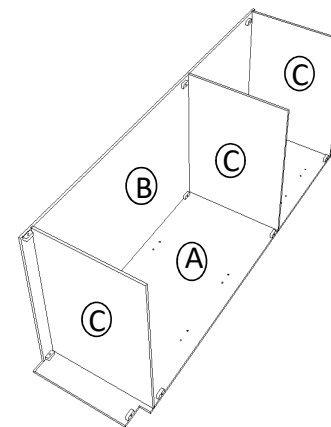


STEP3

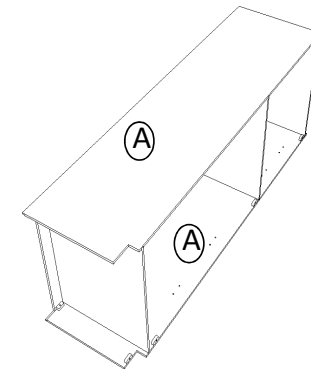






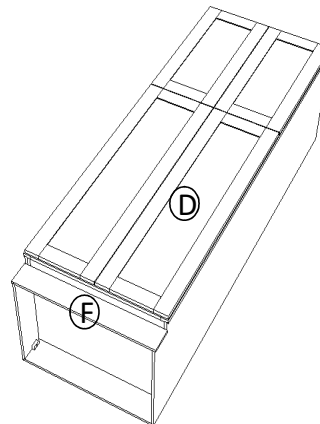STEP4

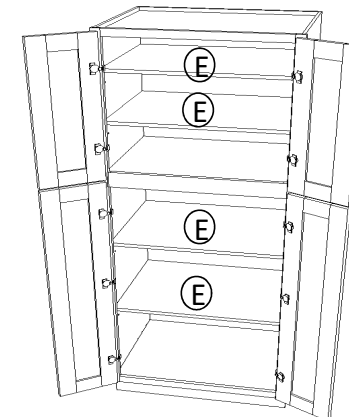

STEP5



| 5 | TWO IN ONE FASTENER |  |
|---------------|------------------------|---|
| 4 | 1 3/8" SOFTCLOSE HINGE |  |
| 3 | BUMPER |  |
| 2 | SHELF CLIP |  |
| 1 | 1/2" SCREW |  |
| NO. | Description | PICTURE |
| HARDWARE LIST | | |

ASSEMBLY INSTUCTIONS

OC31.584 OC31.590 OC31.596

Getting started:

prepare a protection layer, a screwdriver

STEP 1 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 2 Use splints to connect the bottom and back panel.

STEP 3 Use splint and two in one fasteners to connect the side panel with the back panel.

STEP 4 Use splints and two in one fasteners to connect the face frame and skirting board to the side panel.

STEP 5 Lock the solid wood strip of the front frame with screws

STEP 6 Install the drawer box and lock the slide rail.


STEP 7 Slide the drawer into the cabinet.

1、 84"to 90"high cabinets have four adjustable shelves(E)


2、 96"high cabinets have five adjustable shelves(E)

| PARTS LIST | | |
|------------|--------------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 5 |
| D | Face Frame,Door Attached | 1 |
| E | ADJUSTABLE SHELF | |
| F | SKIRTING BOARD | 1 |
| G | RAWER BOARD EDG | 6 |
| H | DRAWER BOARD | 6 |
| I | DRAWER PASE PLAT | 3 |


STEP1

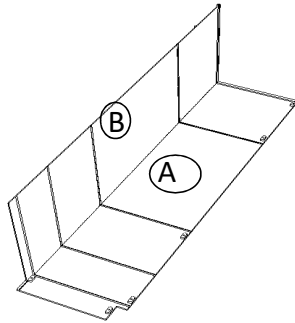


STEP2

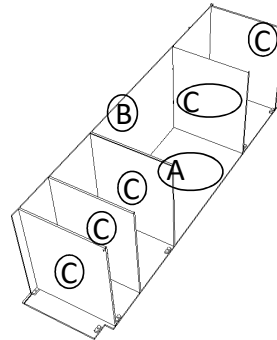


STEP3

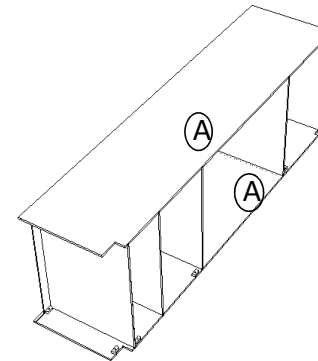


STEP4

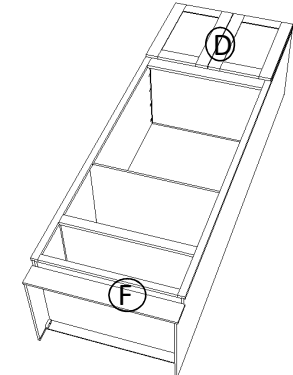


STEP5

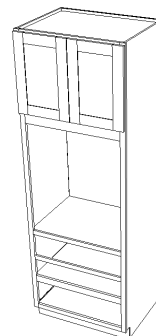


STEP6

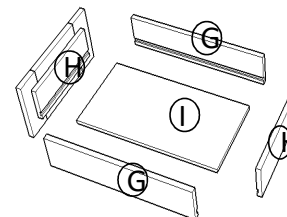

Ball bearing sidemount drawer runners

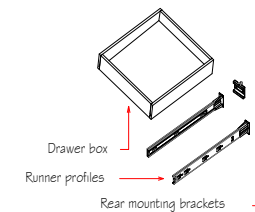

STEP7

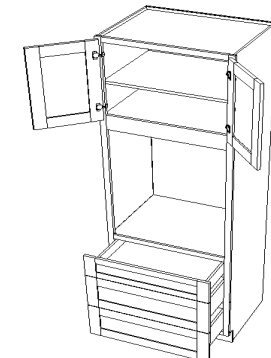

| 5 | TWO IN ONE FASTENER | |
|-----|------------------------|---------|
| 4 | 1 3/8" SOFTCLOSE HINGE | |
| 3 | BUMPER | |
| 2 | SHELF CLIP | |
| 1 | 1/2" SCREW | |
| NO. | Description | PICTURE |

HARDWARE LIST

ASSEMBLY INSTRUCTIONS

BLS33 BLS36

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Use splints and two in one fasteners to connect the back side panel and front side panel.

STEP 2: Connect the front side panel and the base panel with screws.

STEP 3: Use splints and two in one fasteners to connect the front side panel and face frame 1.

STEP 4: Connect the front side panel and the base panel with screws.


STEP 5: Use splints and two in one fasteners to connect the bracket and skirting board, and put it into the back panel and adjustable shelf.

STEP 6: Use splints and two in one fasteners to connect the front side panel and face frame 2.


STEP 7: Use ou22 hinge and 165 ° hinge to link the door and lock it on the front frame with screws

| PARTS LIST | | |
|------------|------------------|-----|
| NO. | Description | QTY |
| A | FRONT SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | BOTTOM PANEL | 1 |
| D | Face Frame 1 | 1 |
| E | Face Frame 2 | 1 |
| F | BACK SIDE PANEL | 2 |
| G | SKIRTING BOARD | 2 |
| H | BRACKET | 1 |
| I | ADJUSTABLE SHELF | 1 |


STEP1

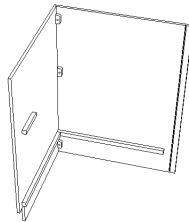


STEP2



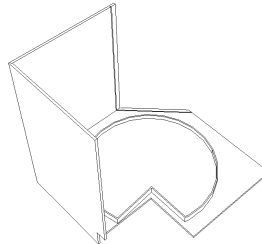


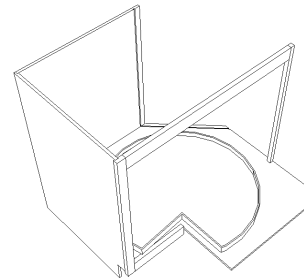


STEP3

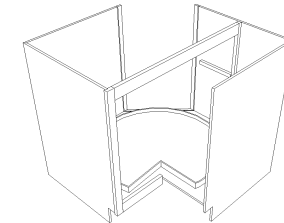


STEP4




| 6 | 165° HINGE |  |
|-----|---------------------|---|
| 5 | OU22 HINGE |  |
| 4 | 1" SCREW |  |
| 3 | Iron foot code |  |
| 2 | BUMPER |  |
| 1 | TWO IN ONE FASTENER |  |
| NO. | Description | PICTURE |

HARDWARE LIST

STEP5

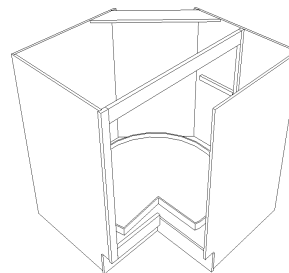

STEP6

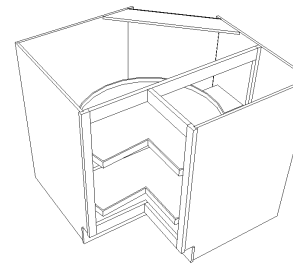

STEP7

